


MTU 396 engine parts list

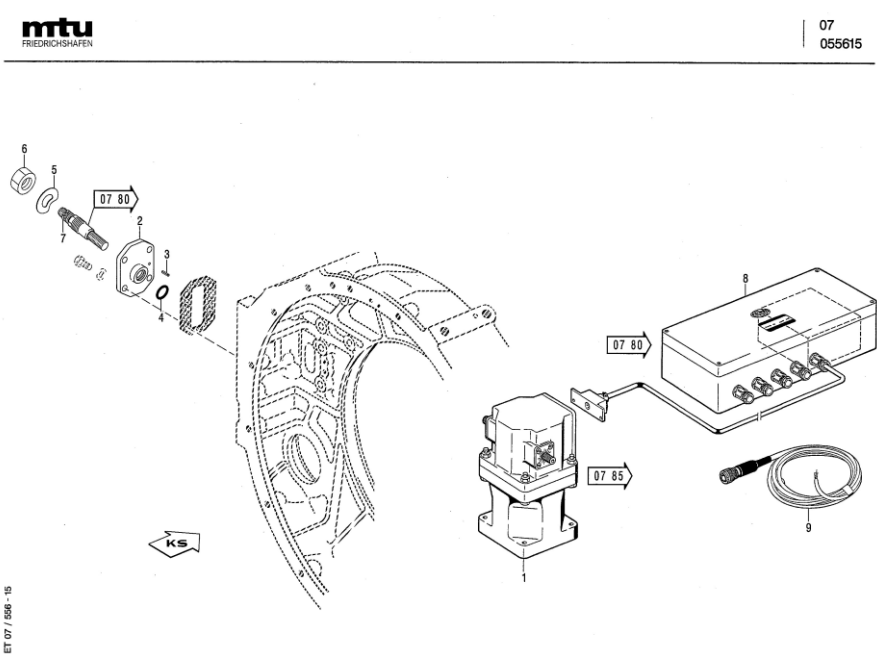

Pos.	C/N	Description	Order No.	Qty	U/M	Dimension
1	01	ACTUATOR	0010612100	001	EA	
2	02	COVER	5550610703	001	EA	
3	03	SPRING PIN	001481004002	001	EA	4 X 16
4	04	O-RING	700429020003	001	EA	20 X 4
5	05	SPRING WASHER	000137024200	001	EA	B 24
6	06	HEX NUT	000439024204	001	EA	B M 24 X 1,5
7	07	SPEED SENSOR	5550600163	001	EA	
8	08	TERMINAL BOX	0011530705	001	EA	
9	09	CABLE	5005302334	001	EA	6M

View the details page:

<https://www.diesel-cn.com/product/5550600163-mtu-speed-sensor/>